

OPERATION MANUAL of JAC 0436R/3 (0891-102)

● Caution

- (1) Before using the battery charger - please read all instructions and cautionary markings.
- (2) Use the battery charger in a well ventilated area - for indoor use only.
- (3) To avoid the risk of injury, charge only lead-acid or gel cell type rechargeable batteries.
- (4) Beware of correct polarity.
- (5) Slight heat on the exterior while charging.
- (6) Avoid exposure to heat
- (7) Please remove the plug from AC power outlet after charging

● Instruction of charging procedure

- (1) Connect correct polarized clips to battery terminals.
- (2) Connect to mains and switch on. Then charging starts - Orange LED light.
- (3) Charging can continue in "Float stage" without harming the battery.


● LED Indication

LED1 : RED → Power on LED2 : ORANGE → Charging GREEN → Full charged


● FAN Control

- 1) Fan on fast speed (Bulk/ Absorption Charge)
- 2) Fan on slow speed (Float Charge)


● Charging Curve

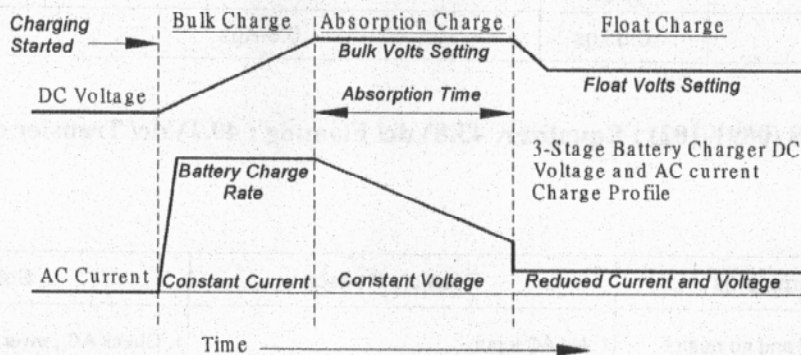

● Case Drawing

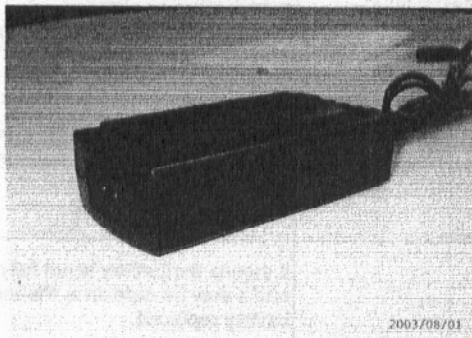

2A Charger

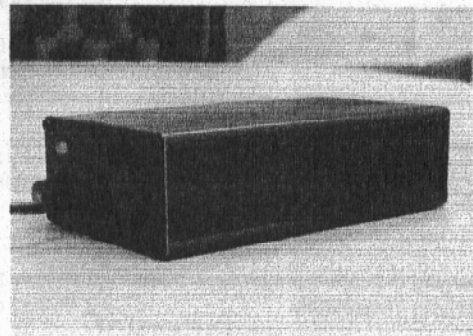

3A ~ 12A Charger

2003/08/01